



Fixed Set Point Temperature Alert (40 °F)



# **This Package Contains:**

- 1 TA-40
- 1 Mounting Kit (2 screws and 2 anchors)
- 1 Product Guide

# **Features:**

- Set point monitoring to warn of freezing temperatures
- Connects to most hardwire or wireless alarm systems
- Small size for unobtrusive appearance
- Normally Closed ("N.C.") device
- Do NOT put the TA-40 device into a cooler/freezer environment. Use EnviroAlert Professional® or EnviroAlert® with a hardwired sensor for cooler/freezer environments.

### Note:

- Do NOT place any Temp°Alert® in a cooler/freezer. Frost buildup and moisture can cause the device to malfunction.
- Test device weekly to ensure proper operation.

### Specifica ons:

Power Requirements	No power required to operate
Contact Ra ng	24V DC/AC =<200mA
Fixed Se ng	N.C. >39.5 °F (>4.2 °C)
Temperature Accuracy	±5.4 °F (±3.0 °C)
Outputs	N.C. dry contacts. NOT for high voltage use
Weight	3oz (85.0g)
Dimensions	2.5" x 0.8" x 0.55" (6.4cm x 2.0cm x 1.4cm)
Moun ng	Two screw holes







Tech Support 8:00am - 5:00pm Central Time (800) 635-4269 • (507) 625-7231 techsupport@winland.com www.winland.com



### Introduction:

Thank you for your purchase of the Winland Temp°Alert® model TA-40. Your new Temp°Alert® has been designed for reliable monitoring of areas where low temperature limits are critical. Temp°Alert® monitors and activates when the temperature drops below 39.5 °F (4.2 °C).

#### Location:

It is difficult to precisely specify the location or quantity of TA-40's to install. A few factors such as room size, effectiveness of the ventilation system, and the likelihood of freezing should be considered. If the building already has an energy management systems, an easy rule of thumb is to install a TA-40 near each thermostat. When protecting a building against feeze damage, always install at least one Temp°Alert® on every level of the home of business.

## **Installation/Items Needed:**

- Standard or Philips Screwdriver
- Quantity of two (2) #6 screws
- 18-22 AWG twisted pair wire

## Step 1:

Use the base of the TA-40 as a template and mark the position of the screw holes. Drill pilot holes if necessary. Align the TA-40 with mounting holes and install the screws. Do not fully tighten screws at this time.

# Step 2:

Connect the TA-40 to your warning device by attaching an 18-22 AWG twisted pair cable to the terminals. Slide the cover on and finish tightening the mounting screws.

# **Operation and Testing Procedures:**

The TA-40 must be in an area where the temperature range is within -40 to +212 °F (-40 to +100 °C). Contacts will remain closed at temperatures above 39.5 °F (4.2 °C). If the temperature drops below 39.5 °F (4.2 °C) the contacts will open to activate any hardwire alarm or wireless transmitter. The tolerance on this temperature switch is  $\pm 5.4$  °F ( $\pm 3.0$  °C).

To manually activate the TA-40 for testing purposes, place the device in a freezer for 10 minutes. Remove the TA-40 from the freezer; test the contacts with an ohmmeter to confirm they have opened.

#### WARRANTY AND SERVICE INFORMATION

Winland Electronics, Inc. ("Winland") warrants to the original purchaser from Winland that each product of Winland's that it manufactures shall be free from defects in material and factory workmanship for a period of one (1) year from the date of purchase, when properly installed and operated under normal conditions according to Winland's instruction.

Winland's obligation under this limited warranty is limited to correcting the product without charge, at its factory any part or parts thereof which are returned, transportation charges prepaid, to the factory within one year of the date of purchase subject to Winland's examination showing to Winland's satisfaction to be covered by this warranty.

Product returns will not be accepted unless a Return Material Authorization has been issued by Winland, which is subject to purchaser's identification of the purchase order number and product serial number. UNAUTHORIZED RETURN SHIPMENT OR SHIPMENT CONTRARY TO WINLAND'S WRITTEN INSTRUCTIONS WILL VOID THIS LIMITED WARRANTY. Correction of such defects by repair, replacement, or refund of the amount paid for the product, at Winland's option, shall constitute fulfillment of all Winland's obligations under this limited warranty. Repaired and replacement parts will be warranted for the remainder of the original product warranty. Repairs not covered by this limited warranty may be offered by Winland for a charge.

This limited warranty shall not apply to any of Winland's products which have been subject to misuse, negligence, accident, or which have been repaired or altered outside of Winland's factory.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSES, NON-INFRINGEMENT, DESIGN, AND TITLE, AND ANY WARRANTIES ARISING FROM COURSE OF DEALING, USAGE OF TRADE OR OTHERWISE. ALL OTHER REPRESENTATIONS MADE TO THE END USER/PURCHASER BY ANY OTHER PARTY ARE EXCLUDED. No person, agent or dealer is authorized to give warranties on behalf of Winland nor to assume for Winland any other liability in connection with any Winland product.

WINLAND SHALL NOT BE LIABLE TO ANY PERSON FOR INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY DESCRIPTION, WHETHER ARISING OUT OF WARRANTY OR OTHER CONTRACT, NEGLIGENCE, OTHER TORT, STRICT LIABILITY OR OTHERWISE. Under no circumstances shall Winland's liability under this limited warranty exceed the purchase price paid by the end user/purchaser for the product. The parties agree that the limitation of remedies in this document is an agreed upon allocation of risk and does not cause the remedy to fail of its essential purpose.