




Wiring Guide for the WB350.

The purpose of this document is to provide a visual aid to assist with wiring common applications for the WB200.

- Page 1: Cover of the WB350 with description of Wiring Diagrams
- Page 2: Focus on sensor input
- Page 3: NO
- Page 4: WB350 with multiple connection all in one diagram.



Wiring Key	
	Sensor Wire
	Normally Open ("N.O.") Wire
	Common Wire



Tech Support 8:00am - 5:00pm Central Time
(800) 635-4269 • (507) 625-7231
techsupport@winland.com
www.winland.com




wb200.winland.com
D-011-0185 REV A (07/2024)

WB350



WINLAND™
ELECTRONICS, INC.

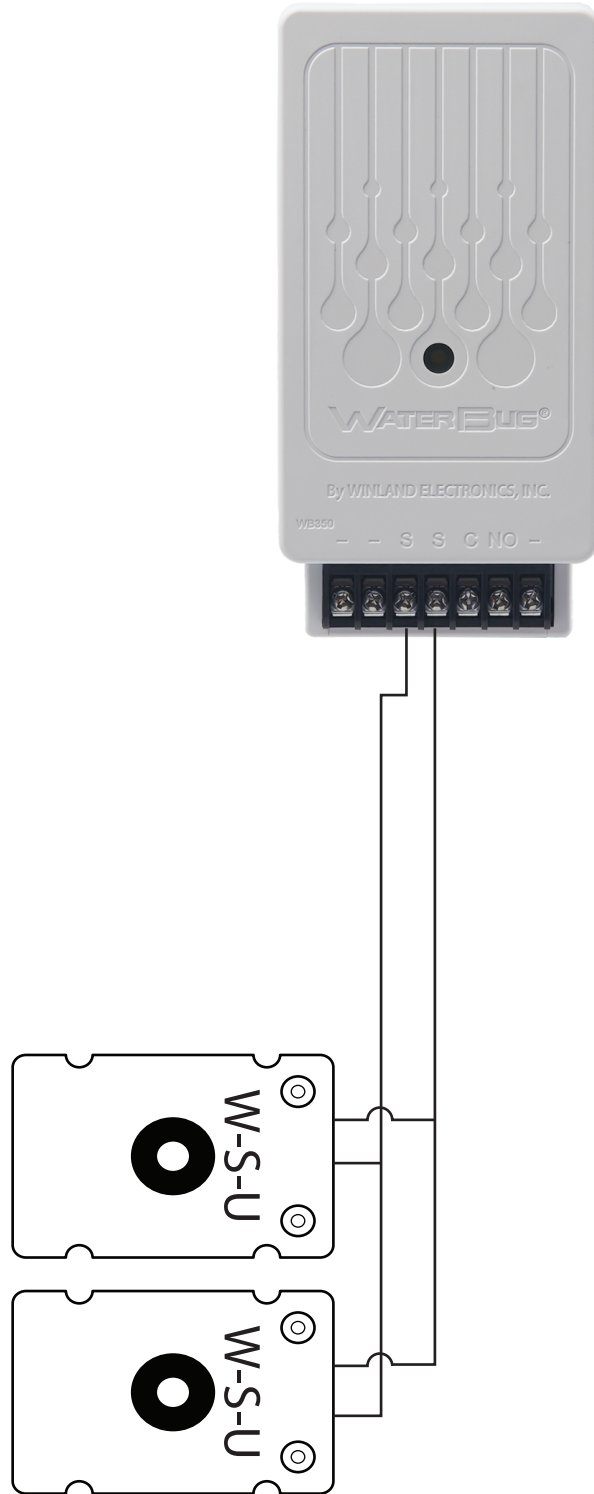

WB350



WINLAND™
ELECTRONICS, INC.

